



TI-Nspire™ handhelds

Test preparation: Resetting all memory

Use this method when exams require clearing all memory including Scratchpad, documents and programs. Documents and programs will be deleted, not disabled.

IMPORTANT: Resetting all memory permanently deletes all user-entered data and files from the calculator. You may want to back up your TI-Nspire™ handheld to a computer before resetting.*

Resetting all memory

Before the exam

 
Resetting all memory prior to exams will ensure that no user-saved information is available during the exam.

After each exam


Repeating all of the steps will reset all memory again and ensure that any information entered or saved by the user during test is permanently deleted.

* Use TI-Nspire™ computer software to back up your handheld prior to preparing it for an exam (resetting all memory) and to restore data and files after the exam.


- 1) Press **2nd** **2** to open the My Documents file browser.

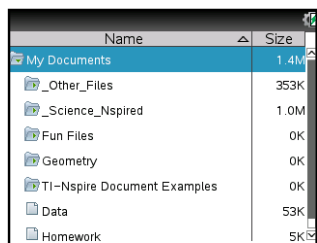

 
- 2) Press **menu** to open the context menu. Select **C: Delete All**. (You may need to arrow down).

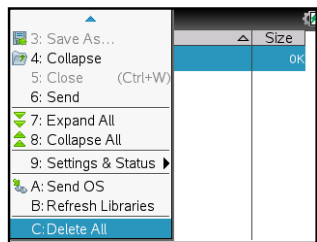

 - 3) The Data Loss dialog box opens. Click **OK** to confirm that you want to clear the handheld memory and programs.

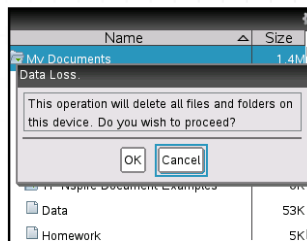

 - 4) All factory defaults are restored. Click **OK** to complete.

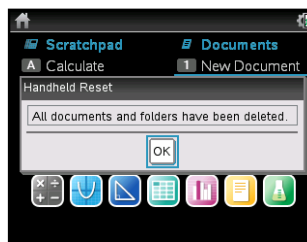

If you have questions or need assistance, contact **800-TI-CARES (800.842.2737)**, ti-cares@ti.com or chat through online service at <http://support.education.ti.com>

Screens may vary slightly by model and Operating System (OS).